
 
 





## 4.4 Microstrip dipole

### Java applet

 Output / Výstup dat	 Module Graph	 Phase Graph / Fázl Graf
 Input / Vstup dat		
Enter the frequency of the microstrip dipole antenna:	<input type="text" value="6"/> Frequency / Kmitočet [GHz]	
Enter the length of the microstrip dipole antenna:	<input type="text" value="20"/> Length of dipole / Délka dipólu [mm]	
Enter the width of the microstrip dipole antenna:	<input type="text" value="1"/> Width of dipole / Šířka dipólu [mm]	
How many segments does the antenna have?	<input type="text" value="33"/> # of Segments / Počet segmentů (max. 250)	
Enter the height of the substrate:	<input type="text" value="10"/> Height of substrate / Výška substrátu [mm]	
Enter the relat. permittivity of the substrate:	<input type="text" value="2"/> Rel.permittivity of substrate/Rel.permittivita substrátu	
 Calculate / Vypočti		 Help